

The codes below are for the Virgin Media remote control which looks like this:



Important: If your remote looks like this but has a white logo at the bottom, then do not use the codes below, but use the codelist for remote type 12.

If your TV isn't listed below, then follow the instructions using code '0010' instead.

| | |
|----------------|------|
| Aiwa | 1000 |
| Akai | 4270 |
| Alba | 3570 |
| Amstrad | 2890 |
| Aoc | 1250 |
| Bang & Olufsen | 1560 |
| Basic Line | 3040 |
| Beko | 3720 |
| Bush | 3970 |
| Daewoo | 3580 |
| Dmtech | 4560 |
| Dual | 3820 |
| Ferguson | 4260 |
| First Line | 3270 |
| Fujitsu | 3800 |
| Funai | 3530 |
| Goldstar | 4150 |
| Goodmans | 3620 |
| Grundig | 4120 |
| Hinari | 3380 |
| Hitachi | 4310 |
| Humax | 4480 |
| Hyundai | 4460 |
| Jvc | 3450 |
| Lg | 2260 |
| Loewe | 3630 |
| Logik | 1570 |
| Luxor | 4250 |
| Matsui | 4240 |

| | |
|------------|------|
| Mirai | 4610 |
| Mitsubishi | 3940 |
| Nec | 2460 |
| Nordmende | 4060 |
| Orion | 4200 |
| Panasonic | 4000 |
| Philips | 4190 |
| Pioneer | 3020 |
| Proline | 4640 |
| Samsung | 4080 |
| Sanyo | 4070 |
| Schneider | 4230 |
| Sharp | 3180 |
| Sony | 3670 |
| Swisstec | 4660 |
| Tevion | 4430 |
| Thomson | 4050 |
| Toshiba | 3920 |
| Vestel | 2680 |
| ViewSonic | 4680 |