

The codes below are for the Virgin Media remote control which looks like this:



Important: If your remote doesn't look like this, then do not use the codes below, but return to the main help page and follow the instructions for the remote which matches yours.

If your TV isn't listed below, then follow the instructions using code '0010' instead.

Aiwa	1000
Akai	4270
Alba	3570
Amstrad	2890
Aoc	1250
Bang & Olufsen	1560
Basic Line	3040
Beko	3720
Bush	3970
Daewoo	3580
Dmtech	4560
Dual	3820
Ferguson	4260
First Line	3270
Fujitsu	3800
Funai	3530
Goldstar	4150
Goodmans	3620
Grundig	4120
Hinari	3380
Hitachi	4310
Humax	4480
Hyundai	4460
Jvc	3450
Lg	2260
Loewe	3630
Logik	1570
Luxor	4250
Matsui	4240

Mirai	4610
Mitsubishi	3940
Nec	2460
Nordmende	4060
Orion	4200
Panasonic	4000
Philips	4190
Pioneer	3020
Proline	4640
Samsung	4080
Sanyo	4070
Schneider	4230
Sharp	3180
Sony	3670
Swisstec	4660
Tevion	4430
Thomson	4050
Toshiba	3920
Vestel	2680
ViewSonic	4680